



HP Mini 311 Wireless Card Replacement

This installation guide will provide information on replacing the wireless card for an HP Mini 311.

Written By: Christian Santoyo



INTRODUCTION

If you are having problems with internet connection, you may want to replace your wireless network card on your HP Mini 311.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- Lay the laptop on a flat surface, bottom side up and slide the two battery release latches toward the outside of the case.

Step 2




- Slide the battery away from the device to remove.

Step 3 — Memory Shield



- With the device still in a bottom side up position, proceed to unscrew the two 4.8mm Phillips 00 screws from the memory shield.


 The screws will remain in the shield.

Step 4



- Lift the memory shield up and remove from the laptop.


Step 5 — Wireless Card

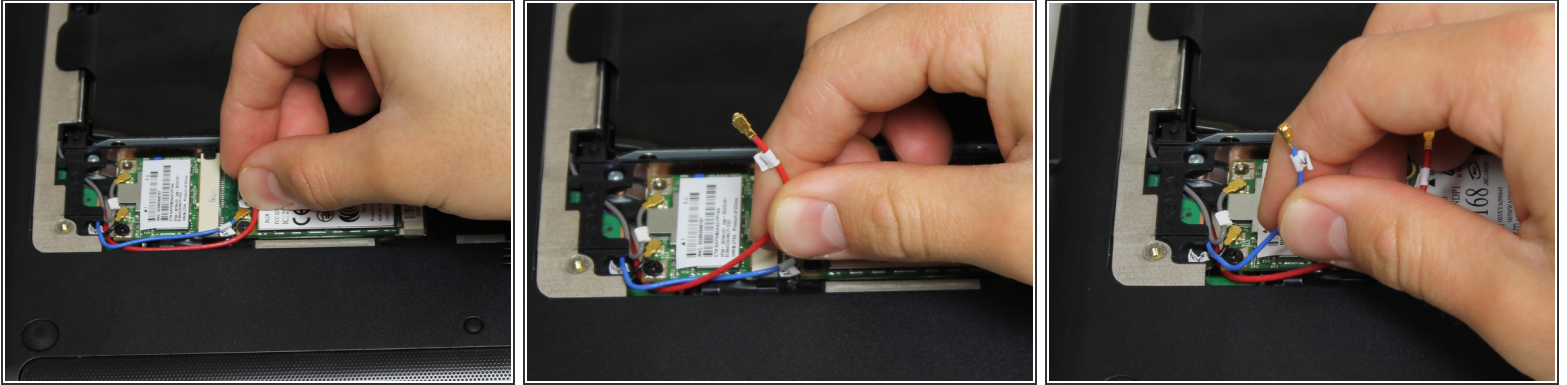

- Begin by removing the red and blue wires from the wireless card.


⚠ Gently remove to avoid damaging the ends of the wires.

Step 6

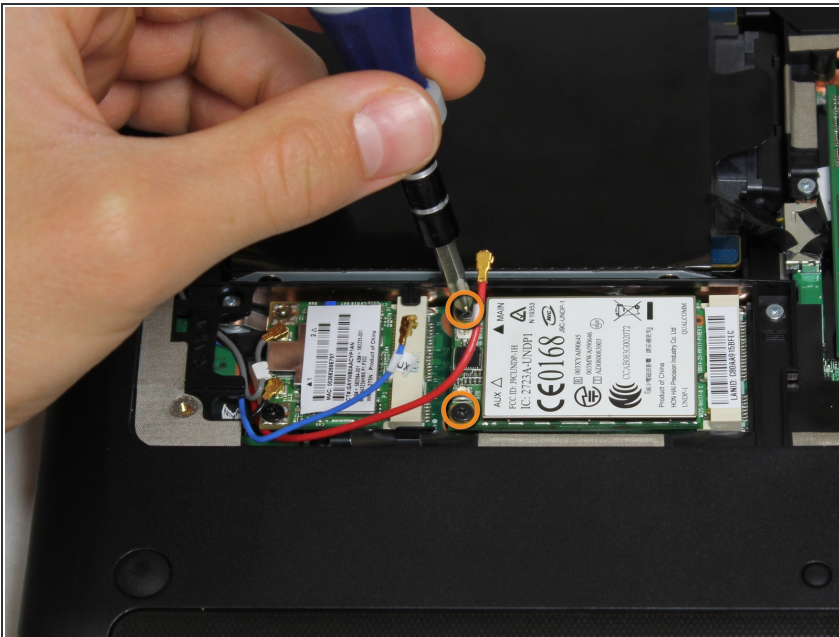

- Remove the two Phillips 00 3.8mm screws attached to the wireless card.

Step 7

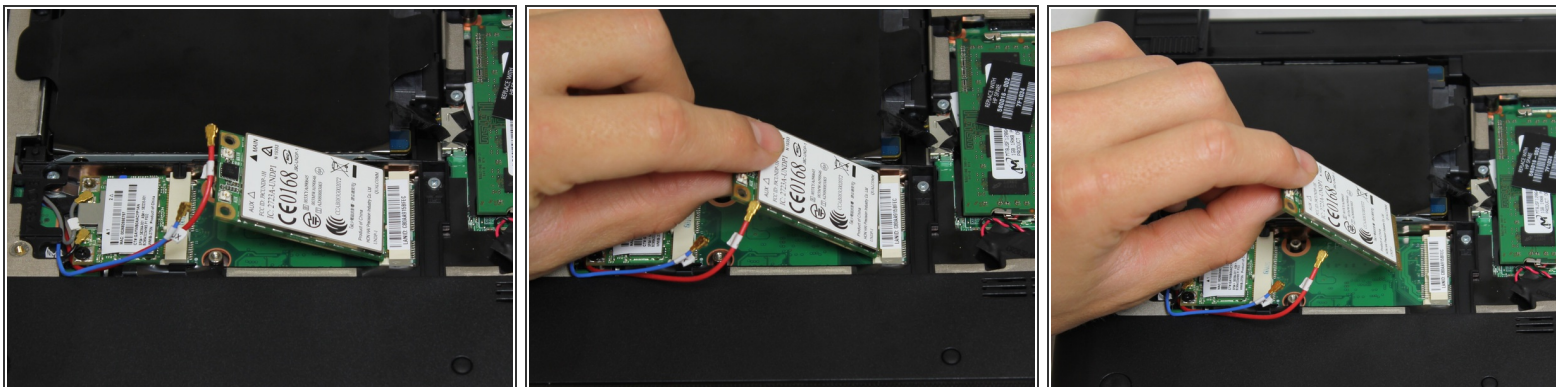

- Lift up the unattached side of the wireless card and pull out to remove.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-02 11:32:57 PM.